

Changing the Time on Meridian Norstar

by [Affordable Communications](#)

- Press the **Feature** key.
- Type in **266344**. (this spells out CONFIG)
- Type in **22742**. (this spells out BASIC)
- the screen will read **Terminals and Sets** and 4 arrows will light up near the keys on the bottom right part of the phone.
- Press the bottom right key until the display reads **Time and Date**.
- Press the top right key.
- Using the softkeys (the 3 keys directly under the display) change the date.
- Press the bottom right arrow key.
- Using the softkeys again, change the time and hit the **RLS** key.